

Important Notice

Remotes are NOT programmed to module. Before operating the system you must "teach" all remotes to the module. See below for Remote Learning procedures.

Code Learning Mode Instructions:

- 1) System must be disarmed.
- 2) Turn the ignition key ON 3 times within 5 seconds — ON, OFF, ON, OFF, and leave the key ON.
- 3) Siren or horn will chirp.
- 4) Within 5 seconds press and hold valet/override switch for 3-5 seconds
- 5) Siren will chirp 3 short chirps. System is in Remote Learning Mode
- 6) Within 5 seconds press button 1 (or LOCK button) of each remote, you will hear a confirmation chirp when the system has learned the remote. Code all remotes at this time.
- 7) Turn the ignition OFF. Remotes are now ready to operate the system.

Note: Once you enter the code learning mode all previous coding on other transmitters will be removed from your system's memory!