

## Transmitter Indications Continued



**Start -**  
The display will show START to indicate the ignition is turned on and the engine is going to crank.



**Clock Set -**  
When entering the Clock Set mode, the display will show CLOCK then switch to the hour and minute setting.



**Engine Run -**  
When the engine starts and continues to run, the ENGINE RUN will be displayed, and the icon will remain on.



**Alarm Clock Set -**  
When entering the Alarm Clock Set mode, the display will also show the icon to indicate the Alarm Clock is on.



**Valet mode -**  
The display will show VALET and the icon to confirm entering the Valet mode.



**Start Timer Set -**  
When entering the Start Timer Set mode, the display will show the icon while setting the Start Time. Once the Start time is set, the icon is displayed indicating the vehicle will start at the programmed time.



**Lock (Valet) -**  
If the doors are locked with the transmitter in Valet mode, the display will show VALET and the icon to confirm locking.



**Chirp Delete -**  
When Chirp Delete is selected using the transmitter, the display will show CHIRP and the icon to confirm silent operation.



**Unlock (Valet) -**  
If the doors are unlocked with the transmitter in Valet mode, the display will show VALET and the icon to confirm locking.




**Confirmation Beep -**  
When the transmitter's confirmation beep is turned on or off, the display will show the icon or icon to indicate the new setting.



**Transmitter Paging -**  
When the Call function is activated from the vehicle, the display will show icon.



**Low Battery -**  
When the transmitter battery needs replacement, the display will flash the icon.

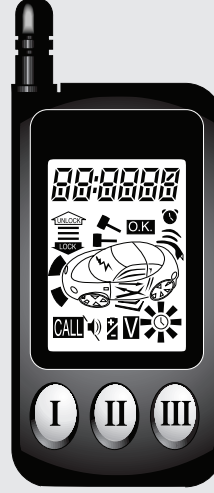

# BWSFM-3 Coding Instructions

- ### ADDING A REMOTE CONTROL
- When you enter the code learning mode, the system will learn new remotes and automatically delete all other remotes that were previously operating the system.
- NOTE:** You must code all desired remotes at this time. The BWF1250 can learn a maximum of two transmitters.
- To enter Code Learning Mode:
1. Turn ignition key on, off, and leave on within 5 seconds.
  - The parking lights will flash once.
  2. Press and hold program switch for 2 seconds.
  - The LED and parking lights will flash once. The siren will give a series of chirps (as long as arming chirps are on).
  3. Release the program switch.
  4. Program all desired remotes by pressing button #1 on each of the transmitters.
  - The siren will chirp after the system has learned each remote control.
  5. Turn ignition key off.
  - The remotes are now programmed to the system.

### FM 2-WAY SYSTEM W/ TEXT DISPLAY

#### Transmitter Operation

**ARM/DISARM/PANIC Button -** To arm or disarm the system, press button 1. To activate the panic feature, press button 1 and hold for three seconds.

**START Button -** To start the vehicle, press and hold button 2 for two seconds. To shut down the vehicle, press and hold button 2 for two seconds.

**CONFIRMATION Button -** To check current status of the system, press button 3. The current status of the system will be displayed on the transmitter.

**TRUNK Button -** To activate the trunk output, press and hold button 3 for two seconds.

**PROGRAMMING Mode -** To activate the trunk output, press and hold button 3 for two seconds.

#### Transmitter Indications

**Shock/Page -** The display will show Shock and flash the animated icon to indicate shock sensor triggering.

**Door -** If a door is opened while the system is armed, the display will show DOOR, and the door frame will animate.

**Hood -** If the hood or trunk is opened while the system is armed, and the display will show HOOD and the icon will be displayed.

**Panic -** The display will show PANIC when the Arm/Disarm button is held to enter the Panic mode.

**Arm -** The display will show ARM and the animated icon to confirm arming.

**Disarm -** The display will show DISARM and the animated icon to confirm disarming.

**Door -** The display will show DOOR and flash the icon opening.

**Trunk -** The display will show TRUNK and flash the icon opening to confirm.

**Warn Away -** The display will show WARN if the icon will flash.

**Shock/Page -** The display will show Shock and flash the animated icon to indicate shock sensor triggering.

**Door -** If a door is opened while the system is armed, the display will show DOOR, and the door frame will animate.

**Hood -** If the hood or trunk is opened while the system is armed, and the display will show HOOD and the icon will be displayed.

**Panic -** The display will show PANIC when the Arm/Disarm button is held to enter the Panic mode.